

WILSON AUTO ELECTRIC LIMITED


"Quality Electrical Products"

HELPFUL INSTALLATION HINTS

CAUTION POLARIZE

GENERATOR REGULATOR BEFORE STARTING ENGINE.

DELCO

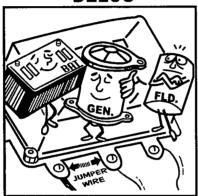

FORD



Jump between BAT and GEN. terminals.

PRESTOLITE





Jump between ARM. and BAT. Terminals.





Disconnect FLD. Wire and touch the BAT. Terminal with it.

CAUTION ... Double Contact Regulators Never use a jumper to ground the GEN. Or REG. Field terminal when double

contact regulator is used. It will burn the contacts and ruin the regulator.



