

TYPICAL RADIO HOOKUP SHOWING TOP VIEW OF SOCKET IN RADIO

INSTALL:


Two (2) metal straps and installing socket are furnished with each unit. Remove radio and install 4 prong socket on lower left hand side of radio chassis.

WIRE SOCKET:

Cut lead to high side of volume control. Run wire from pin #4 to high side of volume control. Run wire from pin #1 to line cut from volume control. Wire pin #2 to ground or chassis of radio. Wire pin #3 to cold side of radio on/off switch. Mount phono in suitable position under dash as level as possible. Plug phono into socket installed in radio. Phono is ready for operation.

TO OPERATE:

Place records on spindle, turn on/off switch to on. Start phono by depressing reject switch to start, hold momentarily. To reject records, depress reject switch. All records may be rejected by slightly turning small knob in center of record spindle.

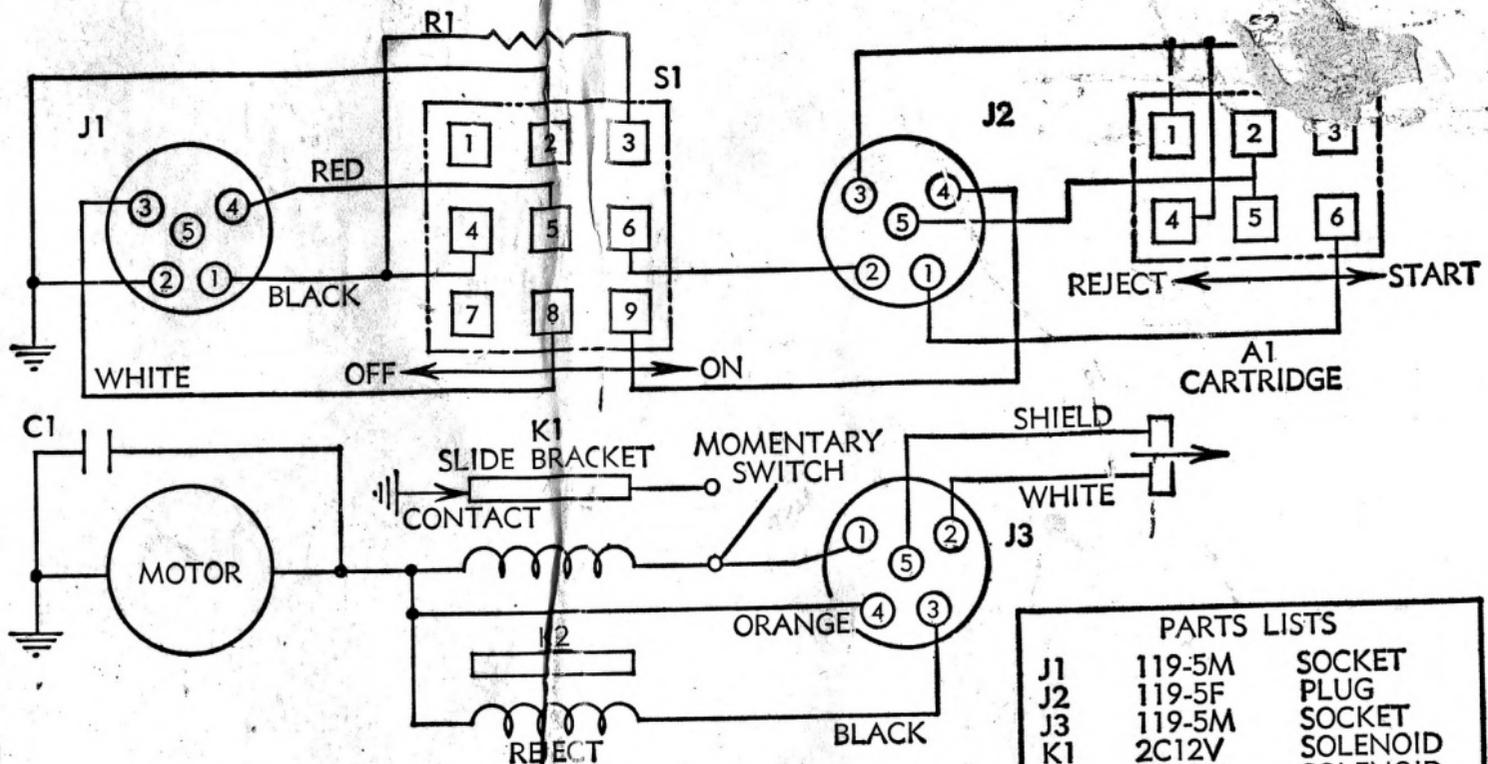

PARTS LISTS		
J1	119-5M	SOCKET
J2	119-5F	PLUG
J3	119-5M	SOCKET
K1	2C12V	SOLENOID
K2	2C12V	SOLENOID
A1	89-1	CARTRIDGE
C1	.005	CAPACITOR
R1	100	RESISTOR
S1	3PDT	SWITCH
S2	2PDT	SWITCH